



Airflow Data Supplement

NOTE: Read the entire installation instruction manual before starting installation for the units listed in this supplement.

The data in this supplement details the rated indoor air (cfm) airflow used for the unit AHRI efficiency rating for the following models: 569J, 575J with 524J***A, and 575J with 524J***H.

569J***A/B with 524J***A

Model Numbers	Full Load Airflow (cfm)
569J*07A/B – 524J*07A	2400
569J*08A/B – 524J*08A	3000
569J*12A/B – 524J*12A	4000
569J*14A/B – 524J*14A	4375
569J*16A/B – 524J*16A	6000
569J*25A/B – 524J*25A	8300

575J***A/B/D/E with 524J***H

Model Numbers	Full Load Airflow (cfm)
575J*07A/B – 524J*07H	2400
575J*08A/B – 524J*08H	3000
575J*12A/B – 524J*12H	3000
575J*16D/E – 524J*16H	6000
575J*25D/E – 524J*25H	7400

569J***D/E/F with 524J***A

Model Numbers	Full Load Airflow (cfm)
569J*12D/E/F – 524J*12A	4000
569J*14D/E – 524J*14A	4400
569J*16D/E/F – 524J*16A	6000
569J*25D/E/F – 524J*25A	8300