

# Overview

The Remote Indoor Temperature Sensor is used to sense temperature remotely.

## Features

Used to sense temperature if the thermostat is installed in a poor temperature sensing location.

Small remote temperature sensor to match any room decor.

Easy to install and use.

Factory calibrated; no field calibration required.

## Product Specifications

### Application

Wireless Indoor Air Sensor

### Dimensions (in.)

2 7/8 in. high x 1 7/8 in. wide x 15/16 in. deep

### Dimensions (mm)

73mm high x 48 mm wide x 24 mm deep

### Includes

2 AAA alkaline batteries and mounting hardware

### Used With

Redesigned Prestige IAQ, Prestige IAQ 2.0, Prestige 2.0, All New RedLINK VisionPRO 8000

### Mounting

Mounts on a vertical wall with supplied bracket and mounting hardware

### Operating Humidity Range (% RH)

5 to 90% RH, non-condensing

### Operating Temperature Range (F)

35 F to 114 F for optimal battery life, 0 F to 120 F

### Operating Temperature Range (C)

-17.8 C to 48.9 C, 1.7 C to 45.6 C for optimal battery life

### Color

Arctic White

### Power Method

Battery