

AGAGC9PNS01B Gas Conversion Kit, Propane to Natural Condensing (90%+) Furnaces 40,000 BTUH to 140,000 BTUH Models Only

Installation Instructions

NOTE: Read the entire instruction manual before starting the installation.



A200203

NOTE: Read the entire instruction manual before starting the installation.

SAFETY CONSIDERATION

WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death. This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide could result causing property damage, personal injury, or loss of life. The qualified service agency is responsible for the proper installation of this furnace with this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

AVERTISSEMENT


LE FEU, L'EXPLOSION, CHOC ELECTRIQUE, ET MONOXYDE DE CARBONE EMPOISONNER

Cette trousse de conversion doit être installée par un servie d'entretien qualifié, selon les instructions du fabricant et selon toutes les exigences et tous les codes pertinents de l'autorité compétente. Assurez-vous de bien suivre les instructions dans cette notice pour réduire au minimum le risque d'incendie, d'explosion ou la production de monoxyde de carbone pouvant causer des dommages matériels, de blessure ou la mort. Le service d'entretien qualifié est responsable de l'installation de cette trousse. L'installation n'est pas adéquate ni complète tant que le bon fonctionnement de l'appareil converti n'a pas été vérifié selon les instructions du fabricant fournies avec la trousse.

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. Trained service personnel must perform all other operations. When working on heating equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit, and other safety precautions that may apply.

Follow all safety codes. In the United States, follow all safety codes including the current edition of the National Fuel Gas Code (NFGC) NFPA No. 54/ANSI Z223.1. In Canada, refer to the current edition of the National Standard of Canada, Natural Gas and Propane Installation Codes (NSCNGPIC), CAN/CSA-B149.1 and .2. Wear safety glasses and work gloves. Have a fire extinguisher available during start-up, adjustment steps, and service calls.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury. Understand the signal words DANGER, WARNING, CAUTION and NOTE. The words DANGER, WARNING, and CAUTION are used with the safety alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies a hazard which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

INTRODUCTION

WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD

Failure to follow instructions could result in personal injury, death or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions, which could result in personal injury or death. Consult your distributor or branch for information or assistance. The qualified installer or agency must use only factory-authorized kits or accessories when servicing this product.

WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

! WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

! CAUTION

UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage or improper operation.

Do NOT use this kit with furnaces with an input of 26,000 BTUH; the unit will be severely over-fired. This could result in delayed ignition, sooting or premature heat exchanger failure.

This instruction covers the installation of gas conversion kit to convert the following furnaces from propane gas usage to natural gas usage.

NOTE: See appropriate sections for your furnace type.

Table 1 – Kit Contents

QUANTITY	DESCRIPTION
2	REGULATOR SPRINGS
4	ORIFICES (BAG ASSEMBLIES)
1	LABELS 346162-201 through 346162-209
1	PLUG, PIPE
1	INSTRUCTIONS

SINGLE-STAGE GAS VALVE

Condensing Furnaces with 40,000 to 140,000 BTUH (not all models have 140,000 BTUH) gas input rates and a.) Single-Stage, 4-Way Multipoise, Hot Surface Ignition with PSC blower motor or b.) Single-Stage gas valve with Fixed-Speeds Constant Torque ECM (FCT) blower motor.

TWO-STAGE & MODULATING GAS VALVE

Condensing Furnaces with 40,000 through 120,000 BTUH gas input rate and a.) Modulating gas valve with Variable-Speed Constant Airflow ECM (VCA), b.) Two-Stage gas valve with Variable-Speed Constant Airflow ECM (VCA), or c.) Two-Stage gas valve with Variable-Speed Constant Torque ECM (VCT) blower motor.

DESCRIPTION AND USAGE

This kit is designed for use in the furnaces listed in [Table 2](#) or [Table 3](#), see [Table 1](#) for kit contents. To accommodate many different furnace models, more parts are shipped in kit than will be needed to complete conversion. When installation is complete, discard extra parts.

SINGLE-STAGE CONDENSING FURNACES

Table 2 – Single Stage Model Numbers

BEGINNING WITH:			
59SP		59SC	
912S	915S	922S	925S
926S	PG95S	PG95ES	PG92ES
(F/G)9MXE	(N/R)92ES	N96VSN	PG92S
R9MS	N9MS	WF(A/H/S)	(N/R)95ES

* Except 26,000 BTUH models.


TWO-STAGE & MODULATING CONDENSING FURNACES

Table 3 – Two-Stage & Modulating Model Numbers

BEGINNING WITH:			
59MN	59T(N/P)	PG96V	PG95X
987M	986T	925T	926T
(F/G)97C	(F/G)9MA	(F/G)9MV	(F/G)96V
(F/G)9MXT		(F/G)96C	

INSTALLATION

1. Set room thermostat to lowest setting or "OFF"
2. Disconnect power at external disconnect, fuse or circuit breaker.
3. Turn off gas at external shut-off or gas meter.
4. Remove outer doors and set aside.
5. Turn electric switch on gas valve to OFF.

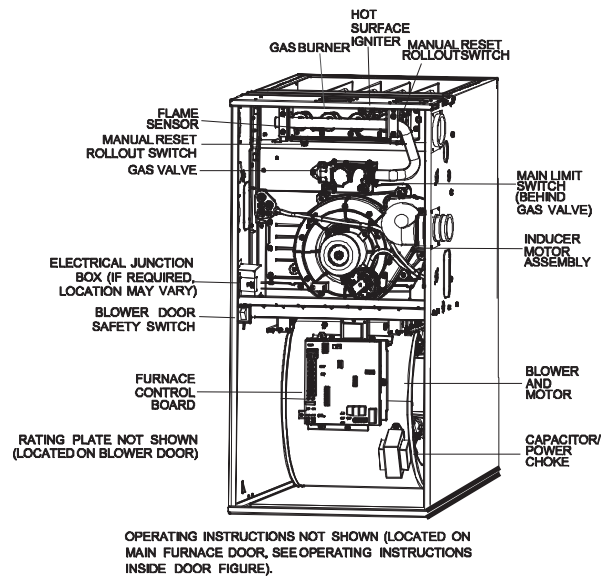

**Fig. 1 – Representative Furnace Drawing
MANIFOLD/ORIFICE/BURNER REMOVAL**

A190014

! CAUTION

UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage or improper operation.

Label all wires prior to disconnection when servicing controls.

! ATTENTION

D'EQUIPEMENT D'OPERATION

Toute erreur de câblage peut être une source de danger et de panne.

Lors des opérations d'entretien des commandes, étiqueter tous les fils avant de les déconnecter.

NOTE: Use a back-up wrench on the gas valve to prevent the valve from rotating on the manifold or damaging the mounting to the burner box.

1. Disconnect the gas pipe from gas valve and remove pipe from the furnace casing, see [Fig. 1](#).
2. Disconnect the connector harness from gas valve. Disconnect wires from Hot Surface Igniter (HSI) and Flame Sensor.

- Support the manifold and remove the four (4) screws that secure the manifold assembly to the burner box and set aside.
- Note the location of the green/yellow wire ground wire for re-assembly later, see [Fig. 2](#).
- Remove wires from both rollout switches, see [Fig. 3](#).
- Slide one-piece burner assembly out of slots on sides of burner box, see [Fig. 3](#).
- Remove the flame sensor from the burner assembly.
- Remove the orifices from the manifold and discard.

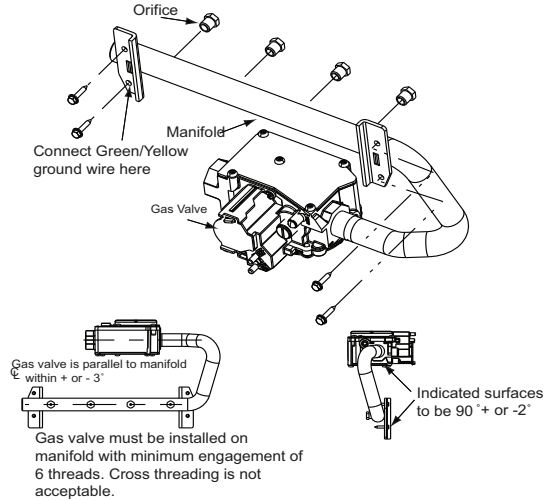


Fig. 2 – Manifold Assembly

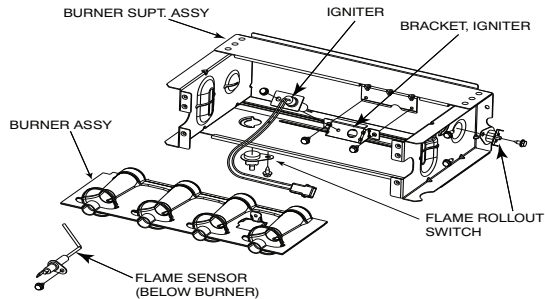


Fig. 3 – Burner Assembly


ORIFICE SELECTION/DERATE



UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit damage.

DO NOT re-drill burner orifices. Improper drilling may result in burrs, out-of-round holes, etc. Obtain new orifices if orifice size must be changed, see [Fig. 4](#).

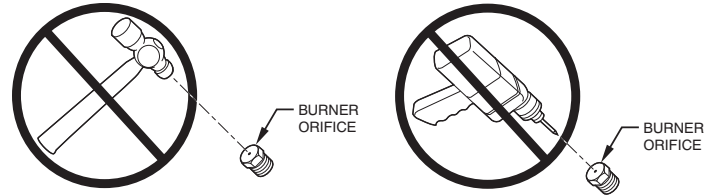

A96249

Fig. 4 – Burner Orifice

For Single Stage and Two Stage Furnaces:

Determine natural gas orifice size and manifold pressure for correct input at installed altitude by using [Table 4](#) for Single Stage furnaces and [Table 5](#) for Two-Stage furnaces.

- Obtain yearly heat-value average (at installed altitude) for local gas supply.
- Obtain yearly specific-gravity average for local gas supply.
- Find installation altitude in [Table 4](#) or [Table 5](#).

For Canada altitudes of 2000 to 4500 ft., use U.S.A. Altitudes of 2001 to 3000 ft. in [Table 4](#) or [Table 5](#).

- Find closest natural gas heat value and specific gravity in [Table 4](#) or [Table 5](#).
- Follow heat-value line and specific-gravity line to point of intersection to find orifice size and manifold pressure settings.

For Modulating Furnaces:

Follow Steps 1 and 2 above.

For Step 3 use:

[Table 6](#) for all sizes (20,000 BTUH/Max-Heat/8,000 BTUH Min-Heat per burner) except 60,000 BTUH models in a 21-in. wide cabinet.

[Table 7](#) for 60,000 BTUH models in a 21-in. wide cabinet. (20,200 BTUH Max-Heat/8,000 BTUH Min-Heat per burner)

- For both tables, follow heat-value line and specific-gravity line to point of intersection to find orifice size and manifold pressure settings.

For all furnaces:

Furnace gas input rate on furnace rating plate is for installations at altitudes up to 2000 ft. (610 M).

In the U.S.A.; the input rating for altitudes above 2000 ft. (610 M) must be reduced by 2 percent for each 1000 ft. (305 M) above sea level.

In Canada, the input rating must be derated by 5 percent for altitudes of 2000 ft. to 4500 ft. (610 M to 1372 M) above sea level.

The Conversion Kit Rating Plate accounts for high altitude derate.

SINGLE-STAGE GAS VALVE

TWO-STAGE GAS VALVE

SINGLE-STAGE FURNACE										
(TABULATED DATA BASED ON 20,000 BTUH PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)										
ALTITUDE RANGE ft (m)		AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft)	SPECIFIC GRAVITY OF NATURAL GAS							
			0.58		0.60		0.62		0.64	
			Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure
U.S.A. and Canada	0 (0) to 2000 (610)	900	43	3.8	42	3.2	42	3.3	42	3.4
		925	43	3.6	43	3.7	43	3.8	42	3.2
		950	43	3.4	43	3.5	43	3.6	43	3.7
		975	44	3.7	44	3.8	43	3.4	43	3.6
		1000	44	3.5	44	3.6	44	3.8	43	3.4
		1025	44	3.3	44	3.5	44	3.6	44	3.7
		1050	44	3.2	44	3.3	44	3.4	44	3.5
		1075	45	3.7	45	3.8	44	3.3	44	3.4
	1100	46	3.7	46	3.8	45	3.8	44	3.2	
U.S.A. and Canada	U.S.A. 2001 (611) to 3000 (914) Canada 2001 (611) to 4500 (1372)	800	42	3.4	42	3.5	42	3.6	42	3.7
		825	43	3.8	42	3.3	42	3.4	42	3.5
		850	43	3.6	43	3.7	42	3.2	42	3.3
		875	43	3.4	43	3.5	43	3.7	43	3.8
		900	44	3.7	44	3.8	43	3.5	43	3.6
		925	44	3.5	44	3.6	44	3.8	43	3.4
		950	44	3.3	44	3.4	44	3.6	44	3.7
		975	44	3.2	44	3.3	44	3.4	44	3.5
	1000	44	3.0	44	3.1	44	3.2	44	3.3	
U.S.A. Only	3001 (915) to 4000 (1219)	775	42	3.3	42	3.4	42	3.5	42	3.6
		800	43	3.8	42	3.2	42	3.3	42	3.4
		825	43	3.6	43	3.7	43	3.8	42	3.2
		850	44	3.8	43	3.5	43	3.6	43	3.7
		875	44	3.6	44	3.7	43	3.4	43	3.5
		900	44	3.4	44	3.5	44	3.7	44	3.8
		925	44	3.2	44	3.4	44	3.5	44	3.6
		950	44	3.1	44	3.2	44	3.3	44	3.4
U.S.A. Only	4001 (1220) to 5000 (1524)	750	42	3.3	42	3.4	42	3.5	42	3.6
		775	43	3.7	43	3.8	42	3.3	42	3.4
		800	43	3.5	43	3.6	43	3.7	43	3.8
		825	44	3.8	43	3.4	43	3.5	43	3.6
		850	44	3.5	44	3.7	44	3.8	43	3.4
		875	44	3.3	44	3.5	44	3.6	44	3.7
		900	44	3.2	44	3.3	44	3.4	44	3.5
		925	44	3.0	44	3.1	44	3.2	44	3.3
U.S.A. Only	5001 (1525) to 6000 (1829)	725	42	3.2	42	3.3	42	3.4	42	3.5
		750	43	3.7	43	3.8	42	3.2	42	3.3
		775	43	3.4	43	3.5	43	3.7	43	3.8
		800	44	3.7	44	3.8	43	3.4	43	3.5
		825	44	3.5	44	3.6	44	3.7	44	3.8
		850	44	3.3	44	3.4	44	3.5	44	3.6
		875	44	3.1	44	3.2	44	3.3	44	3.4
		900	44	2.9	44	3.0	44	3.1	44	3.2
U.S.A. Only	6001 (1830) to 7000 (2133)	675	42	3.4	42	3.5	42	3.6	42	3.8
		700	42	3.2	42	3.3	42	3.4	42	3.5
		725	43	3.6	43	3.7	43	3.8	42	3.3
		750	43	3.4	43	3.5	43	3.6	43	3.7
		775	44	3.6	44	3.7	43	3.4	43	3.5
		800	44	3.4	44	3.5	44	3.6	44	3.7
		825	44	3.2	44	3.3	44	3.4	44	3.5
		850	44	3.0	44	3.1	44	3.2	44	3.3

* Orifice numbers shown in BOLD are factory installed.

A11253A

SINGLE-STAGE FURNACE											
(TABULATED DATA BASED ON 20,000 BTUH PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)											
ALTITUDE RANGE ft (m)		AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft)	SPECIFIC GRAVITY OF NATURAL GAS								
			0.58		0.60		0.62		0.64		
			Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure	Orifice No.	Manifold Pressure	
U.S.A. Only	7001 (2134) to 7500 (2438)	650	42	3.4	42	3.5	42	3.6	42	3.7	
		675	43	3.8	42	3.2	42	3.3	42	3.4	
		700	43	3.5	43	3.7	43	3.8	42	3.2	
		725	44	3.8	43	3.4	43	3.5	43	3.6	
		750	44	3.5	44	3.7	44	3.8	43	3.4	
		8000	44	3.3	44	3.4	44	3.5	44	3.7	
		800	44	3.1	44	3.2	44	3.3	44	3.4	
		825	44	2.9	44	3.0	44	3.1	44	3.2	
U.S.A. Only	8001 (2439) to 9000 (2743)	625	42	3.4	42	3.5	42	3.6	42	3.7	
		650	43	3.8	42	3.2	42	3.3	42	3.4	
		675	43	3.5	43	3.6	43	3.7	42	3.2	
		700	44	3.7	43	3.4	43	3.5	43	3.6	
		725	44	3.5	44	3.6	44	3.7	44	3.8	
		9000	750	44	3.3	44	3.4	44	3.5	44	3.6
		775	44	3.0	44	3.2	44	3.3	44	3.4	
U.S.A. Only	9001 (2744) to 6500 10000 (3048)	600	42	3.3	42	3.4	42	3.6	42	3.7	
		625	43	3.7	42	3.2	42	3.3	42	3.4	
		650	43	3.5	43	3.6	43	3.7	43	3.8	
		675	44	3.7	44	3.8	43	3.4	43	3.5	
		700	44	3.4	44	3.5	44	3.7	44	3.8	
		725	44	3.2	44	3.3	44	3.4	44	3.5	

* Orifice numbers shown in BOLD are factory-installed.

A11253B

Table 4 – Orifice Size and Manifold Pressure (in.w.c.) for Gas Input Rate for Single Stage Gas Valve

TWO-STAGE FURNACE											
(TABULATED DATA BASED ON 20,000 BTUH HIGH-HEAT / 13,000 BTUH LOW-HEAT PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)											
ALTITUDE RANGE		AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft)	SPECIFIC GRAVITY OF NATURAL GAS								
			0.58		0.60		0.62		0.64		
			Orifice No.	Manifold Press High/Low	Orifice No.	Manifold Press High/Low	Orifice No.	Manifold Press High/Low	Orifice No.	Manifold Press High/Low	
ft (m)			No.	High/Low	No.	High/Low	No.	High/Low	No.	High/Low	
U.S.A. and Canada	0 (0) to 1000 1025 2000 (610)	900	43	3.8 / 1.6	42	3.2 / 1.4	42	3.3 / 1.4	42	3.4 / 1.4	
		925	43	3.6 / 1.5	43	3.7 / 1.6	43	3.8 / 1.6	42	3.2 / 1.4	
		950	43	3.4 / 1.4	43	3.5 / 1.5	43	3.6 / 1.5	43	3.7 / 1.6	
		975	44	3.7 / 1.6	44	3.8 / 1.6	43	3.4 / 1.5	43	3.6 / 1.5	
		1000	44	3.5 / 1.5	44	3.6 / 1.5	44	3.8 / 1.6	43	3.4 / 1.4	
		1025	44	3.3 / 1.4	44	3.5 / 1.5	44	3.6 / 1.5	44	3.7 / 1.6	
U.S.A. and Canada	2000 (610)	1050	44	3.2 / 1.3	44	3.3 / 1.4	44	3.4 / 1.4	44	3.5 / 1.5	
		1075	45	3.7 / 1.6	45	3.8 / 1.6	44	3.3 / 1.4	44	3.4 / 1.4	
		1100	46	3.7 / 1.6	46	3.8 / 1.6	45	3.8 / 1.6	44	3.2 / 1.4	
		U.S.A.	800	42	3.4 / 1.4	42	3.5 / 1.5	42	3.6 / 1.5	42	3.7 / 1.6
		2001 (611)	825	43	3.8 / 1.6	42	3.3 / 1.4	42	3.4 / 1.4	42	3.5 / 1.5
		3000 (914)	850	43	3.6 / 1.5	43	3.7 / 1.6	42	3.2 / 1.3	42	3.3 / 1.4
U.S.A. and Canada	Canada 2001 (611)	875	43	3.4 / 1.4	43	3.5 / 1.5	43	3.7 / 1.5	43	3.8 / 1.6	
		900	44	3.7 / 1.6	44	3.8 / 1.6	43	3.5 / 1.5	43	3.6 / 1.5	
		925	44	3.5 / 1.5	44	3.6 / 1.5	44	3.8 / 1.6	43	3.4 / 1.4	
		950	44	3.3 / 1.4	44	3.4 / 1.5	44	3.6 / 1.5	44	3.7 / 1.6	
		975	44	3.2 / 1.3	44	3.3 / 1.4	44	3.4 / 1.4	44	3.5 / 1.5	
		4500 (1372)	1000	46	3.8 / 1.6	45	3.8 / 1.6	44	3.2 / 1.4	44	3.3 / 1.4
U.S.A. Only	3001 (915) to 4000 (1219)	775	42	3.3 / 1.4	42	3.4 / 1.4	42	3.5 / 1.5	42	3.6 / 1.5	
		800	43	3.8 / 1.6	42	3.2 / 1.4	42	3.3 / 1.4	42	3.4 / 1.4	
		825	43	3.6 / 1.5	43	3.7 / 1.6	43	3.8 / 1.6	42	3.2 / 1.4	
		850	44	3.8 / 1.6	43	3.5 / 1.5	43	3.6 / 1.5	43	3.7 / 1.6	
		875	44	3.6 / 1.5	44	3.7 / 1.6	43	3.4 / 1.4	43	3.5 / 1.5	
		900	44	3.4 / 1.4	44	3.5 / 1.5	44	3.7 / 1.5	44	3.8 / 1.6	
U.S.A. Only	4001 (1220) to 5000 (1524)	925	44	3.2 / 1.4	44	3.4 / 1.4	44	3.5 / 1.5	44	3.6 / 1.5	
		950	45	3.7 / 1.6	44	3.2 / 1.3	44	3.3 / 1.4	44	3.4 / 1.4	
		750	42	3.3 / 1.4	42	3.4 / 1.4	42	3.5 / 1.5	42	3.6 / 1.5	
		775	43	3.7 / 1.6	43	3.8 / 1.6	42	3.3 / 1.4	42	3.4 / 1.4	
		800	43	3.5 / 1.5	43	3.6 / 1.5	43	3.7 / 1.6	43	3.8 / 1.6	
		825	44	3.8 / 1.6	43	3.4 / 1.4	43	3.5 / 1.5	43	3.6 / 1.5	
U.S.A. Only	5001 (1525) to 6000 (1829)	850	44	3.5 / 1.5	44	3.7 / 1.5	44	3.8 / 1.6	43	3.4 / 1.4	
		875	44	3.3 / 1.4	44	3.5 / 1.5	44	3.6 / 1.5	44	3.7 / 1.6	
		900	44	3.2 / 1.3	44	3.3 / 1.4	44	3.4 / 1.4	44	3.5 / 1.5	
		925	46	3.8 / 1.6	45	3.7 / 1.6	44	3.2 / 1.4	44	3.3 / 1.4	
		950	42	3.4 / 1.4	42	3.5 / 1.5	42	3.6 / 1.5	42	3.7 / 1.6	
		975	43	3.7 / 1.6	43	3.8 / 1.6	42	3.3 / 1.4	42	3.4 / 1.4	
U.S.A. Only	6001 (1830) to 7000 (2133)	775	43	3.4 / 1.4	43	3.5 / 1.5	43	3.6 / 1.5	42	3.3 / 1.4	
		800	44	3.6 / 1.5	44	3.7 / 1.6	43	3.4 / 1.4	43	3.5 / 1.5	
		825	44	3.4 / 1.4	44	3.5 / 1.5	44	3.6 / 1.5	44	3.7 / 1.6	
		850	44	3.2 / 1.3	44	3.3 / 1.4	44	3.4 / 1.4	44	3.5 / 1.5	
		875	46	3.8 / 1.6	45	3.8 / 1.6	44	3.2 / 1.4	44	3.3 / 1.4	
		900	46	3.7 / 1.6	46	3.8 / 1.6	45	3.8 / 1.6	44	3.2 / 1.4	

MODULATING GAS VALVE

Table 6 to be used with Modulating Furnaces EXCEPT the 60,000 BTUH INPUT IN 21-IN. WIDE CASING

MODULATING FURNACE									
(TABULATED DATA BASED ON 20,000 BTUH MAX-HEAT / 8,000 BTUH MIN-HEAT PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)									
ALTITUDE RANGE	AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft)	SPECIFIC GRAVITY OF NATURAL GAS							
		0.58		0.60		0.62		0.64	
		Orifice No.	Manifold Press Max/Min	Orifice No.	Manifold Press Max/Min	Orifice No.	Manifold Press Max/Min	Orifice No.	Manifold Press Max/Min
U.S.A. and Canada	0 (0)	900	43 3.8 /0.60	42 3.2 /0.50	42 3.3 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55
	925	43 3.6 /0.55	43 3.7 /0.60	43 3.8 /0.60	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50
	950	43 3.4 /0.55	43 3.5 /0.55	43 3.6 /0.60	43 3.6 /0.60	43 3.6 /0.60	43 3.6 /0.60	43 3.6 /0.60	43 3.6 /0.60
	975	44 3.7 /0.60	44 3.8 /0.60	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55
	1000	44 3.5 /0.55	44 3.6 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60
	1025	44 3.3 /0.55	44 3.5 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55
	1050	44 3.2 /0.50	44 3.3 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55
	1075	45 3.7 /0.60	45 3.8 /0.60	44 3.3 /0.50	44 3.3 /0.50	44 3.3 /0.50	44 3.3 /0.50	44 3.3 /0.50	44 3.3 /0.50
	1100	46 3.7 /0.60	46 3.8 /0.60	45 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50
	1100	46 3.7 /0.60	46 3.8 /0.60	45 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50
U.S.A. and Canada	U.S.A.	800	42 3.4 /0.55	42 3.5 /0.55	42 3.6 /0.55	42 3.7 /0.60	42 3.7 /0.60	42 3.7 /0.60	42 3.7 /0.60
	2001 (611)	825	43 3.8 /0.60	42 3.3 /0.50	42 3.4 /0.55	42 3.5 /0.55	42 3.5 /0.55	42 3.5 /0.55	42 3.5 /0.55
	850	43 3.6 /0.60	43 3.7 /0.60	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50
	3000 (914)	875	43 3.4 /0.55	43 3.5 /0.55	43 3.7 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60
	900	44 3.7 /0.60	44 3.8 /0.60	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55
	Canada	925	44 3.5 /0.55	44 3.6 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60
	2001 (611)	950	44 3.3 /0.55	44 3.4 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55
	975	44 3.2 /0.50	44 3.3 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55
	4500 (1372)	1000	46 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	4500 (1372)	1000	46 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
U.S.A. Only	3001 (915)	775	42 3.3 /0.55	42 3.4 /0.55	42 3.5 /0.55	42 3.6 /0.55	42 3.7 /0.60	42 3.7 /0.60	42 3.7 /0.60
	800	43 3.8 /0.60	42 3.2 /0.50	42 3.3 /0.55	42 3.3 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55
	825	43 3.6 /0.55	43 3.7 /0.60	43 3.8 /0.60	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50	42 3.2 /0.50
	850	44 3.8 /0.60	43 3.5 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55
	875	44 3.7 /0.60	44 3.7 /0.60	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55
	4000 (1219)	900	44 3.4 /0.55	44 3.5 /0.55	44 3.7 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60
	925	44 3.3 /0.50	44 3.4 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55
	950	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	950	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	950	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
U.S.A. Only	4001 (1220)	750	42 3.3 /0.55	42 3.4 /0.55	42 3.5 /0.55	42 3.6 /0.55	42 3.7 /0.60	42 3.7 /0.60	42 3.7 /0.60
	775	43 3.7 /0.60	43 3.8 /0.60	42 3.3 /0.50	42 3.3 /0.50	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.4 /0.55
	800	43 3.5 /0.55	43 3.6 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60
	825	44 3.8 /0.60	43 3.4 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55	43 3.5 /0.55
	850	44 3.5 /0.55	44 3.7 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60	44 3.8 /0.60
	875	44 3.3 /0.55	44 3.5 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55	44 3.6 /0.55
	900	44 3.2 /0.50	44 3.3 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55
	925	46 3.8 /0.60	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	925	46 3.8 /0.60	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	925	46 3.8 /0.60	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
U.S.A. Only	5001 (1525)	725	42 3.2 /0.50	42 3.3 /0.55	42 3.4 /0.55	42 3.5 /0.55	42 3.6 /0.55	42 3.6 /0.55	42 3.6 /0.55
	750	43 3.7 /0.60	43 3.8 /0.60	42 3.2 /0.50	42 3.2 /0.50	42 3.3 /0.55	42 3.3 /0.55	42 3.3 /0.55	42 3.3 /0.55
	775	43 3.4 /0.55	43 3.5 /0.55	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60	43 3.7 /0.60
	800	44 3.7 /0.60	44 3.8 /0.60	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55
	825	44 3.5 /0.55	44 3.6 /0.55	44 3.7 /0.60	44 3.7 /0.60	44 3.7 /0.60	44 3.7 /0.60	44 3.7 /0.60	44 3.7 /0.60
	850	44 3.3 /0.50	44 3.4 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55	44 3.5 /0.55
	875	45 3.7 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	900	46 3.7 /0.60	46 3.8 /0.60	45 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50
	900	46 3.7 /0.60	46 3.8 /0.60	45 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50
	900	46 3.7 /0.60	46 3.8 /0.60	45 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50	44 3.2 /0.50
U.S.A. Only	6001 (1830)	675	42 3.4 /0.55	42 3.5 /0.55	42 3.6 /0.60	42 3.8 /0.60	42 3.8 /0.60	42 3.8 /0.60	42 3.8 /0.60
	700	42 3.2 /0.50	42 3.3 /0.55	42 3.4 /0.55	42 3.4 /0.55	42 3.5 /0.55	42 3.5 /0.55	42 3.5 /0.55	42 3.5 /0.55
	725	43 3.6 /0.60	43 3.7 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60	43 3.8 /0.60
	750	43 3.4 /0.55	43 3.5 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55	43 3.6 /0.55
	775	44 3.6 /0.60	44 3.7 /0.60	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55	43 3.4 /0.55
	800	44 3.4 /0.55	44 3.5 /0.55	44 3.6 /0.60	44 3.6 /0.60	44 3.6 /0.60	44 3.6 /0.60	44 3.6 /0.60	44 3.6 /0.60
	825	44 3.2 /0.50	44 3.3 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55	44 3.4 /0.55
	850	46 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	850	46 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55
	850	46 3.8 /0.60	45 3.8 /0.60	44 3.2 /0.50	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55	44 3.3 /0.55

*Orifice numbers shown in BOLD are factory installed.

A11251A

MODULATING FURNACE										
(TABULATED DATA BASED ON 20,000 BTUH MAX-HEAT / 8,000 BTUH MIN-HEAT PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)										
ALTITUDE RANGE		AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft)	SPECIFIC GRAVITY OF NATURAL GAS							
			0.58		0.60		0.62		0.64	
ft (m)		Orifice	Min/ft Press	Orifice	Min/ft Press	Orifice	Min/ft Press	Orifice	Min/ft Press	
			Max/Min		Max/Min		Max/Min		Max/Min	
U.S.A. Only	7001 (2134) to 8000 (2438)	650	42	3.4 / 0.55	42	3.5 / 0.55	42	3.6 / 0.60	42	3.7 / 0.60
		675	43	3.8 / 0.60	42	3.2 / 0.50	42	3.3 / 0.55	42	3.4 / 0.55
		700	43	3.5 / 0.55	43	3.7 / 0.60	43	3.8 / 0.60	42	3.2 / 0.50
		725	44	3.8 / 0.60	43	3.4 / 0.55	43	3.5 / 0.55	43	3.6 / 0.60
	750	44	3.5 / 0.55	44	3.7 / 0.60	44	3.8 / 0.60	43	3.4 / 0.55	
	775	44	3.3 / 0.55	44	3.4 / 0.55	44	3.5 / 0.55	44	3.7 / 0.60	
	800	45	3.8 / 0.60	44	3.2 / 0.50	44	3.3 / 0.55	44	3.4 / 0.55	
	825	46	3.7 / 0.60	46	3.8 / 0.60	45	3.8 / 0.60	44	3.2 / 0.50	
U.S.A. Only	8001 (2439) to 9000 (2743)	625	42	3.4 / 0.55	42	3.5 / 0.55	42	3.6 / 0.55	42	3.7 / 0.60
		650	43	3.8 / 0.60	42	3.2 / 0.50	42	3.3 / 0.55	42	3.4 / 0.55
		675	43	3.5 / 0.55	43	3.6 / 0.60	43	3.7 / 0.60	42	3.2 / 0.50
		700	44	3.7 / 0.60	43	3.4 / 0.55	43	3.5 / 0.55	43	3.6 / 0.55
	725	44	3.5 / 0.55	44	3.6 / 0.60	44	3.7 / 0.60	44	3.8 / 0.60	
	750	44	3.3 / 0.50	44	3.4 / 0.55	44	3.5 / 0.55	44	3.6 / 0.55	
	775	45	3.7 / 0.60	44	3.2 / 0.50	44	3.3 / 0.50	44	3.4 / 0.55	
	U.S.A. Only	9001 (2744) to 10000 (3048)	600	42	3.3 / 0.55	42	3.4 / 0.55	42	3.6 / 0.55	42
625			43	3.7 / 0.60	42	3.2 / 0.50	42	3.3 / 0.55	42	3.4 / 0.55
650			43	3.5 / 0.55	43	3.6 / 0.55	43	3.7 / 0.60	43	3.8 / 0.60
675			44	3.7 / 0.60	44	3.8 / 0.60	43	3.4 / 0.55	43	3.5 / 0.55
700			44	3.4 / 0.55	44	3.5 / 0.55	44	3.7 / 0.60	44	3.8 / 0.60
725			44	3.2 / 0.50	44	3.3 / 0.55	44	3.4 / 0.55	44	3.5 / 0.55

SINGLE-STAGE GAS VALVE

CONVERSION KIT RATING PLATE


THIS APPLIANCE HAS BEEN CONVERTED TO USE NATURAL GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated (per chart below) for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9PNS01B (SUPERSEDES: KGBPN42011SP, NAHD00901NG, AGAGC9PNS01A) FUEL USED: NATURAL GAS

APPLIANCE MODELS	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	NATURAL GAS PRESSURE		IN. W.C. (PO C.E.)		PA
			Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	13.6	4.5	
59S(P/C/E), 91(2/5)S, 92(2/5/6)S, PG9(2/5)S, PG9(2/5)ES, (F/G)9MXE, F9MES, (N/R)9MS, (N/R)95ES, (N/R)92ES, WF(A/H/S), (N/R)96VS	2%	5%	(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)				
			ALTITUDE				
			Manifold Pressure	0-2,000 ft. (0 - 610 m)	3.2 - 3.8	797 - 946	
			Pression Tubulure	2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation		

346162-206 REV.B



A200248

PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION


CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ NATUREL. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISER QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION.

NOTE: La consommation de gaz de la fournaise indiquée sur la plaque signalétique est exacte pour des installations jusqu'à 2000 pieds (610m) au dessus du niveau de la mer. Aux E.U., la consommation pour des altitudes au dessus de 1000 pieds (610m) doit être réduite de 2% pour chaque 1000 pieds (305m) d'élévation au dessus du niveau de la mer. Au Canada, la consommation doit être réduite de 5% entre les altitudes de 2000 pieds (610m) à 4500 pieds (1372m).

KIT NO.: AGAGC9PNS01B (SUPPLANT: KGBPN42011SP, NAHD00901NG, AGAGC9PNS01A) COMBUSTIBLE: GAZ NATUREL

APPOUVÉ POUR LES MODÈLES	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	PRESSION GAZ NATUREL		IN. W.C. (PO C.E.)		PA
			Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	13.6	4.5	
59S(P/C/E), 91(2/5)S, 92(2/5/6)S, PG9(2/5)S, PG9(2/5)ES, (F/G)9MXE, F9MES, (N/R)9MS, (N/R)95ES, (N/R)92ES, WF(A/H/S), (N/R)96VS	2%	5%	(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)				
			ALTITUDE				
			Manifold Pressure	0-2,000 ft. (0 - 610 m)	3.2 - 3.8	797 - 946	
			Pression Tubulure	2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation		

346162-207 REV.B



A200249

Fig. 5 – Conversion Kit Rating Plate (40,000 BTUH to 140,000 BTUH ONLY) Single-Stage Furnace

TWO-STAGE GAS VALVE

CONVERSION KIT RATING PLATE


THIS APPLIANCE HAS BEEN CONVERTED TO USE NATURAL GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated (per chart below) for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9PNS01B (SUPERSEDES: KGAPN43012SP, KGCPN4401VSP, NAHB01001NG, AGAGC9PNS01A) FUEL USED: NATURAL GAS

APPLIANCE MODELS	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	NATURAL GAS PRESSURE		IN. W.C. (PO C.E.)		PA
			Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	13.6	4.5	
59T(N/P), 986T, 92(5/6)T, PG96V, PG95X, (F/G)9MV, (F/G)9MXT, (F/G)96C, (F/G)96V	2%	5%	(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)				
			ALTITUDE				
			Manifold Pressure	0-2,000 ft. (0 - 610 m)	High Heat 3.2 - 3.8 Low Heat 1.4 - 1.8	797 - 946 349 - 448	
			Pression Tubulure	2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation		

346162-208 REV.B



A200250

PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION


CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ NATUREL. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISER QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION.

NOTE: La consommation de gaz de la fournaise indiquée sur la plaque signalétique est exacte pour des installations jusqu'à 2000 pieds (610m) au dessus du niveau de la mer. Aux E.U., la consommation pour des altitudes au dessus de 1000 pieds (610m) doit être réduite de 2% pour chaque 1000 pieds (305m) d'élévation au dessus du niveau de la mer. Au Canada, la consommation doit être réduite de 5% entre les altitudes de 2000 pieds (610m) à 4500 pieds (1372m).

KIT NO.: AGAGC9PNS01B (SUPPLANT: KGAPN43012SP, KGCPN4401VSP, NAHB01001NG, AGAGC9PNS01A) COMBUSTIBLE: GAZ NATUREL

APPOUVÉ POUR LES MODÈLES	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	PRESSION GAZ NATUREL		IN. W.C. (PO C.E.)		PA
			Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	13.6	4.5	
59T(N/P), 986T, 92(5/6)T, PG96V, PG95X, (F/G)9MV, (F/G)9MXT, (F/G)96C, (F/G)96V	2%	5%	(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)				
			ALTITUDE				
			Manifold Pressure	0-2,000 ft. (0 - 610 m)	High Heat 3.2 - 3.8 Low Heat 1.4 - 1.8	797 - 946 349 - 448	
			Pression Tubulure	2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation		

346162-209 REV.B



A200251

MODULATING GAS VALVE

CONVERSION KIT RATING PLATE


THIS APPLIANCE HAS BEEN CONVERTED TO USE NATURAL GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated (per chart below) for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9PNS01B (SUPERSEDES: KGCPN4401VSP, NAHB01001NG, AGAGC9PNS01A)

FUEL USED: NATURAL GAS

APPLIANCE MODELS	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	NATURAL GAS PRESSURE		
			IN. W.C. (PO. C.E.)	PA	
59MN, 987M, (F/G)9MA, (F/G)97C	2%	5%	Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	13.6	3,386
			Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	4.5	1,121
			(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)		
			ALTITUDE		
			Manifold Pressure Pression Tubulure	0-2,000 ft. (0 - 610 m)	Max Heat 3.2 - 3.8 Min Heat 0.50 - 0.60
			2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation	



346162-201 REV.B

A200246

PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION


CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ NATUREL. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISER QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION.

NOTE: La consommation de gaz de la fournaise indiquée sur la plaque signalétique est exacte pour des installations jusqu'à 2000 pieds (610m) au dessus du niveau de la mer. Aux E.U., la consommation pour des altitudes au dessus de 1000 pieds (610m) doit être réduite de 2% pour chaque 1000 pieds (305m) d'élévation au dessus du niveau de la mer. Au Canada, la consommation doit être réduite de 5% entre les altitudes de 2000 pieds (610m) à 4500 pieds (1372m).

KIT NO.: AGAGC9PNS01B (SUPPLANT: KGCPN4401VSP, NAHB01001NG, AGAGC9PNS01A)

COMBUSTIBLE: GAZ NATUREL

APOUVÉ POUR LES MODÈLES	USA % DERATE PER 1000 FT.	CANADA % DERATE FOR 2000-4500 FT.	PRESSION GAZ NATUREL		
			IN. W.C. (PO. C.E.)	PA	
59MN, 987M, (F/G)9MA, (F/G)97C	2%	5%	Max. Inlet Gas Pressure (Press. Max. D'Admission De Gaz)	13.6	3,386
			Min. Inlet Gas Pressure (Press. Min. D'Admission De Gaz)	4.5	1,121
			(For Purpose of Input Adjustment) (Pour L'Adjustment D'Entree)		
			ALTITUDE		
			Manifold Pressure Pression Tubulure	0-2,000 ft. (0 - 610 m)	Max Heat 3.2 - 3.8 Min Heat 0.50 - 0.60
			2,000 - 10,000 ft. (610 - 3050 m)	Refer to Installation Manual Respecter les Instruction D'Installation	



346162-204 REV.B

A200247

Fig. 7 – Conversion Kit Rating Plate (40,000 BTUH to 140,000 BTUH ONLY) Modulating Furnace

INSTALL ORIFICES

1. Install main burner orifices. Do not use PTFE thread-seal tape. Finger-tighten orifices at least one full turn to prevent cross-threading, then tighten with wrench.

2. There are enough orifices in each kit for largest furnace. Discard extra orifices.

NOTE: DO NOT reinstall the manifold at this time.

REMOVE MIXER SCREWS

NOTE: Each burner contains a mixer screw that must be removed. Refer to Fig. 8 for the mixer screw location.


1. Remove the mixer screws from the burners.

NOTE: It is not necessary to plug the hole in the burner when the mixer screws are removed.

2. Insert one-piece burner in slot on sides of burner box and slide burner back in place.

3. Reattach HSI wires to HSI.

4. Verify igniter to burner alignment, see Fig. 9 & Fig. 10.

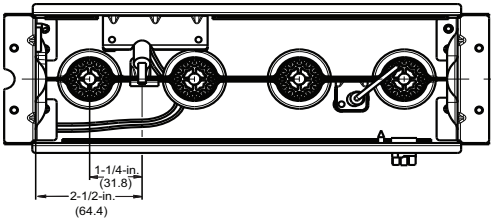

A11405

Fig. 9 – Igniter Position - Back View

Furnace gas input rate on furnace rating plate is for installations at altitudes up to 2000 ft. (610 M).

In the U.S.A.; the input rating for altitudes above 2000 ft. (610 M) must be reduced by 4 percent for each 1000 ft. (305 M) above sea level.

In Canada, the input rating must be derated by 10 percent for altitudes of 2000 ft. to 4500 ft. (610 M to 1372 M) above sea level.

The Conversion Kit Rating Plate accounts for high altitude derate.

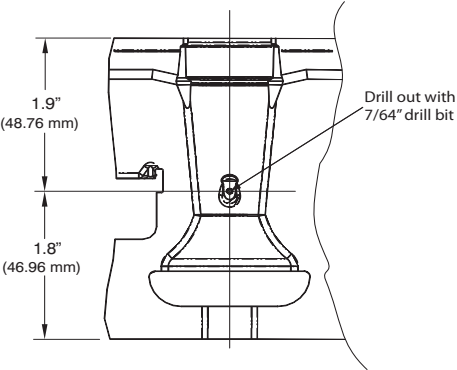


Fig. 8 – Mixer Screw Location

A11460

REINSTALL BURNER ASSEMBLY

To reinstall burner assembly:

1. Attach flame sensor to burner assembly.

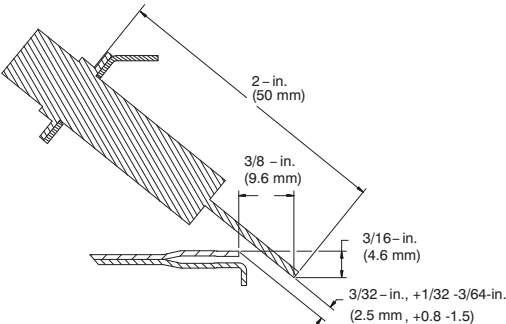


Fig. 10 – Igniter Position - Side View

A12392

CONVERT GAS VALVE**! CAUTION****UNIT OPERATION HAZARD**

Failure to follow this caution may result in unit damage or improper operation.

DO NOT use this kit if the gas valve has a green label (26,000 BTUH model) on it. The 26,000 BTUH model uses a different conversion kit available from your distributor.

NOTE: Do not use this kit if the gas valve in Fig. 11 has a green label on top of the valve. The green label on the gas valve is a special low capacity gas valve. Refer to Specification Sheet for the correct conversion kit.

! CAUTION**UNIT DAMAGE HAZARD**

Failure to follow this caution may result in unit damage

The gas valve must be converted and pre-adjusted before operating on propane gas. If not converted and pre-adjusted, sooting and corrosion will occur leading to early heat exchanger failure.

! WARNING**FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.


! WARNING**ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

Single Stage Gas Valve


1. Refer to Fig. 5. Verify the gas valve has a white label with black lettering on top of the operator.
2. Be sure gas and electrical supplies to furnace are off.
3. Remove caps that conceal adjustment screws for the gas-valve regulators, see Fig. 11 or Fig. 12.
4. Remove the regulator adjustment screw.
5. Remove the propane gas regulator springs (white).
6. Install the natural gas regulator springs (silver).
7. Install the regulator adjustment screws.
8. Turn the adjusting screw clockwise (in) 8.5 full turns. This will increase the manifold pressure closer to the natural set point, see Fig. 11 or Fig. 12.
9. Do not install regulator seal caps at this time.

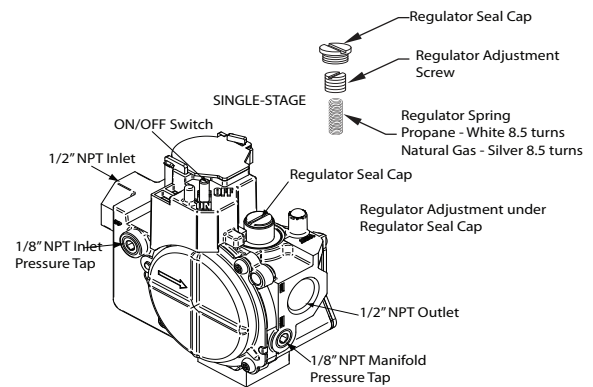


NOTE: Remove the propane gas regulator spring (white) Install the natural gas regulator spring (silver)

Fig. 11 – Gas Valve (Single Stage) without Tower Pressure Ports

A13048

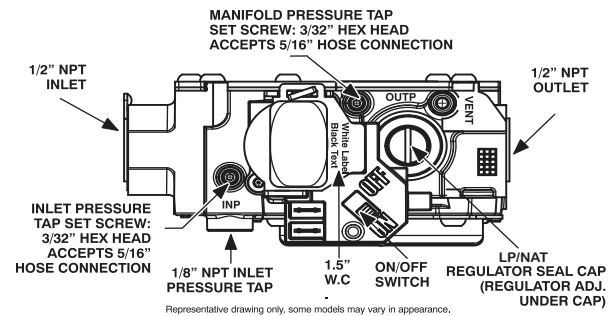

A170118B

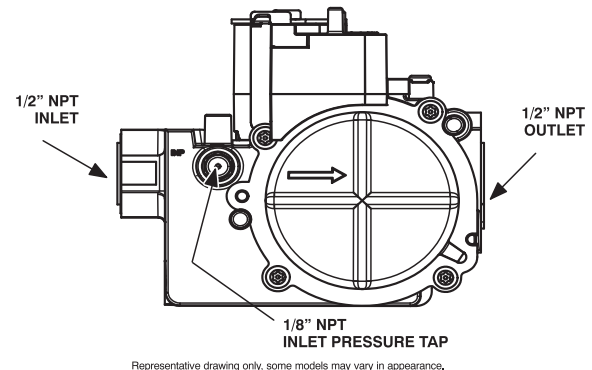

Representative drawing only, some models may vary in appearance.

Fig. 12 – Gas Valve (Single Stage) with Tower Pressure Ports

A170133

Two Stage Gas Valve

Refer to Fig. 13 or Fig. 14.


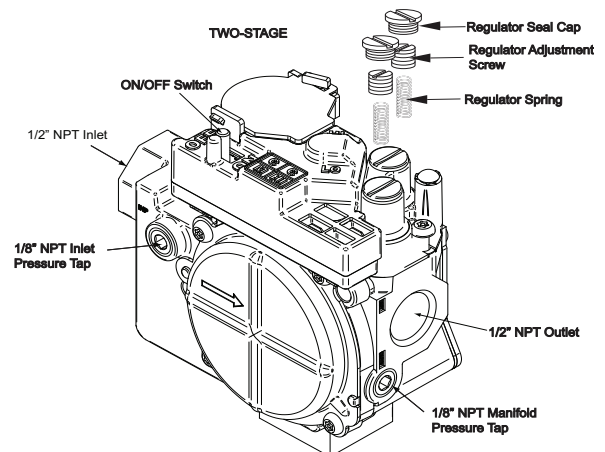



Fig. 13 – Automatic Gas Valve (Two-Stage) without Tower Pressure Ports

A11472

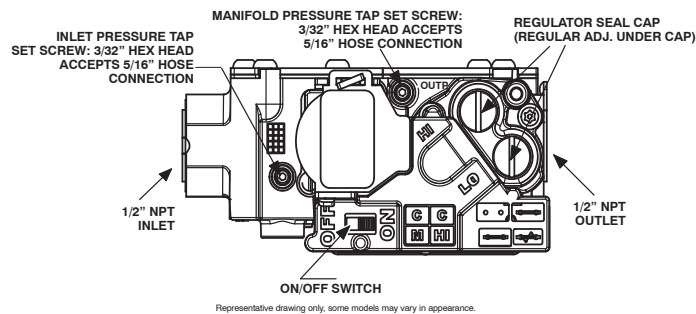

Representative drawing only, some models may vary in appearance.

A170117

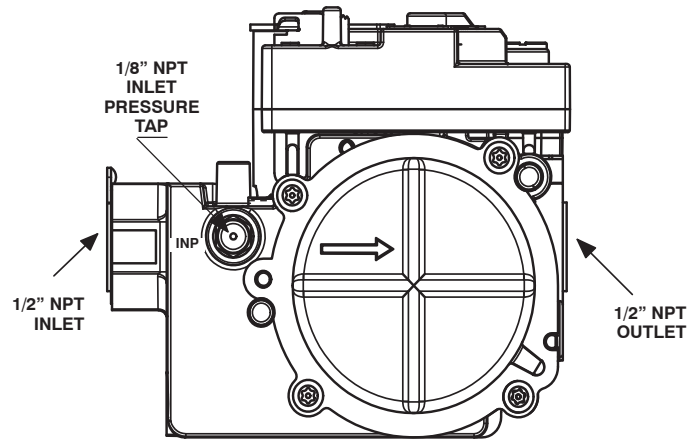

Representative drawing only, some models may vary in appearance.

A170132

Fig. 14 – Automatic Gas Valve (Two-Stage) with Tower Pressure Ports

1. Remove caps that conceal adjustment screws for high heat and low heat gas-valve regulators, see Fig. 13 or Fig. 14.
2. Remove the high heat and low heat propane regulator adjustment screws.
3. Remove the high heat and low heat propane gas regulator springs (white).
4. Install the high heat and low heat natural gas regulator springs (silver).
5. Install the high heat and low heat regulator adjustment screws.
6. Turn high heat stage adjusting screw clockwise (in) 12 full turns. This will increase the manifold pressure closer to the natural set point.
7. Turn low heat stage adjusting screw clockwise (in) 9.5 full turns. This will increase the manifold pressure closer to the natural low heat set point.
8. Do not install regulator seal caps at this time.

Modulating Gas Valve

Refer to Fig. 15 through Fig. 17.


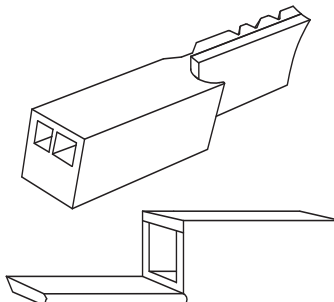


Fig. 15 – Propane Jumper

A11373

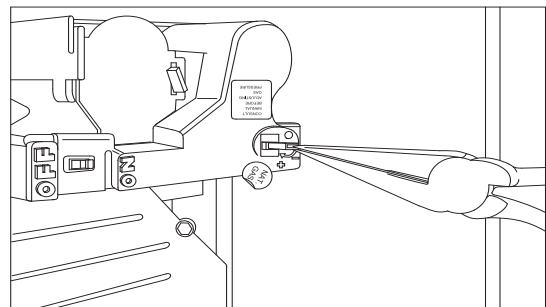


A11375


Fig. 16 – Removing Propane Jumper

NOTE: The Propane jumper for the modulating gas valve is very small. Needle-nose pliers are required to remove the jumper from the valve. If the jumper is not removed, the valve will not operate properly on natural gas pressures.

1. Locate the round “LP GAS” sticker on the top of the gas valve.
2. Peel the sticker off and discard.
3. Note the small square opening in the top of the gas valve.
4. Note the two jumper pins inside the modulating gas valve.
5. Use needle-nosed pliers to grasp the jumper by the tab on the end.
6. Remove the small black plastic propane jumper from the gas valve.
7. Cover the opening in the gas valve with the label marked “NAT GAS.”

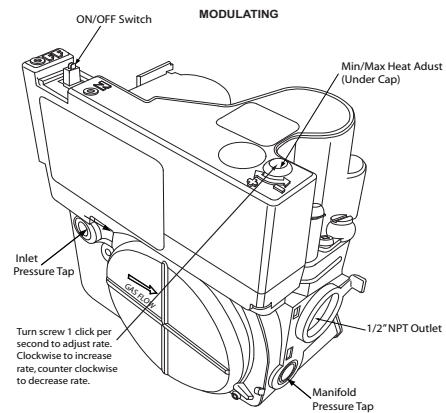

A10496B

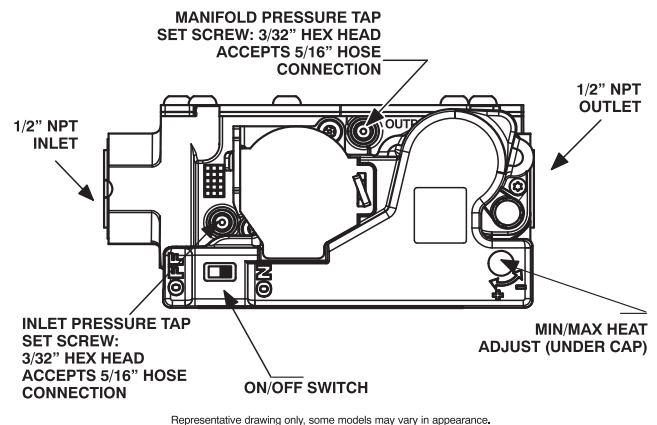

Representative drawing only, some models may vary in appearance.

A170116B

Fig. 17 - Automatic Control Valve (Modulating) without Tower Pressure Ports

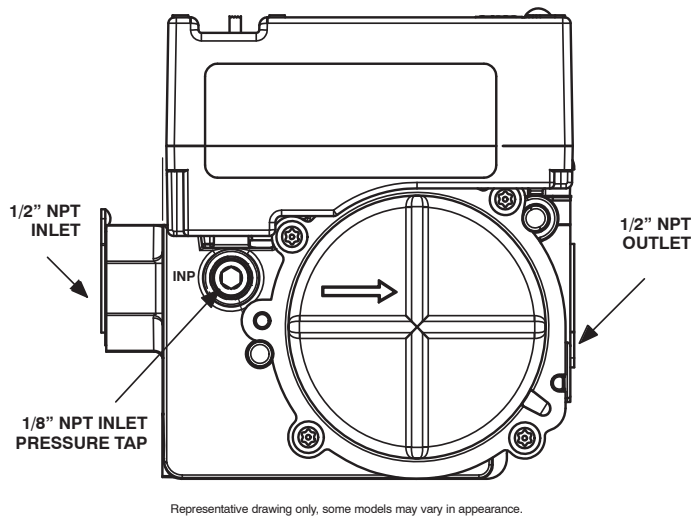


Fig. 17 – Automatic Control Valve (Modulating) without Tower Pressure Ports (continued)

REMOVE LOW GAS PRESSURE SWITCH

NOTE: Remove the Low Gas Pressure Switch before installing the manifold on the burner assembly.

NOTE: There are two ways that the Low Gas Pressure Switch (LGPS) could have been installed during the original natural to Propane gas conversion.

All 14 3/16-in Casings or Vent Passed Between Inducer Assembly and Burner Assembly

If the vent pipe passes between the inducer and burner assembly, or the furnace is a 14 3/16-in. wide casing. The switch is installed as shown in Fig. 18.

1. Remove low gas pressure switch, brass street 90_ elbow, brass hex nipple, brass tee and black iron street 90_ elbow from the gas valve inlet pressure tap, see Fig. 18.

NOTE: Use pipe dope approved for use with Propane gas. DO NOT use PTFE thread-seal tape.

2. Apply pipe dope sparingly to the 1/8-in. (3 mm) NPT pipe plug (provided in kit) and install in the 1/8-in tapped inlet-pressure tap opening in the gas valve. DO NOT over-tighten. Check for gas leaks after gas supply has been turned on.

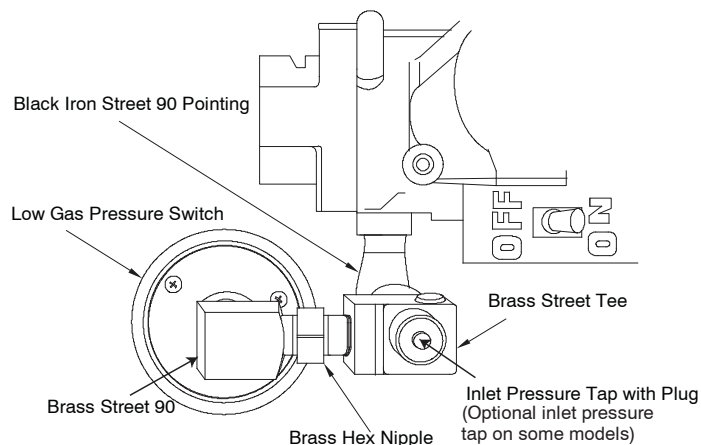


Fig. 18 – LGPS for 14-3/16 Casing or when vent passes between inducer and burner assembly

! WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

! AVERTISSEMENT

RISQUE D'EXPLOSION ET D'INCENDIE

Le non-respect des avertissements de sécurité pourrait d'entraîner des blessures graves, la mort ou des dommages matériels.

Ne jamais utiliser une flamme nue pour vérifier la présence des fuites de gaz. Pour la vérification de tous les joints, utiliser plutôt une solution savonneuse commerciale fabriquée spécifiquement pour la détection des fuites de gaz. Un incendie ou une explosion peut entraîner des dommages matériels, des blessures ou la mort.

Casings Wider Than 14 3/16-in/Vent Does Not Pass Between Inducer and Burner Assembly

If the vent pipe does not pass between the inducer and burner assembly, or the furnace is wider than a 14 3/16-in. wide casing. The switch is installed as shown in Fig. 19.

1. Remove Low Gas Pressure Switch (LGPS), brass street tee, brass nipple and brass street 90° elbow from the gas valve inlet pressure tap, see Fig. 19.

NOTE: Use pipe dope approved for use with Propane gas. DO NOT use PTFE thread-seal tape.

2. Apply pipe dope sparingly to the 1/8-in. (3 mm) NPT pipe plug (provided in kit) and install in the 1/8-in (3 mm) tapped inlet-pressure tap opening in the gas valve. DO NOT over-tighten. Check for gas leaks after gas supply has been turned on.

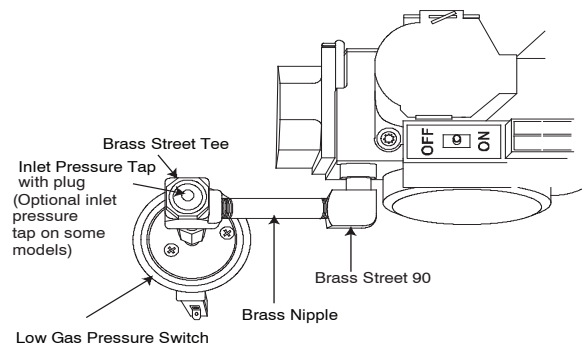


Fig. 19 – LGPS for casing wider than 14-3/16 and vent does not pass between inducer and burner assembly

INSTALL MANIFOLD

1. Refer to Fig. 2 and Fig. 3.
2. Align the orifices in the manifold assembly with the support rings on the end of the burner.
3. Insert the orifices in the support rings of the burners. Manifold mounting tabs should fit flush against the burner box.

NOTE: If manifold does not fit flush against the burner box, the burners are not fully seated forward. Remove the manifold and check burner positioning in the burner box assembly.

4. Attach the green/yellow wire and ground terminal to one of the manifold mounting screws, see Fig. 2.

5. Install the remaining manifold mounting screws.
6. Connect the wires to the flame sensor and hot surface igniter.
7. Connect the connector harness to gas valve.

NOTE: Do not use PTFE thread-seal tape.

8. Insert the gas pipe through the grommet in the casing. Apply a thin layer of pipe dope to the threads of the pipe and thread the pipe by into the gas valve.

NOTE: Use a back-up wrench on the gas valve to prevent the valve from rotating on the manifold or damaging the mounting to the burner box.

9. With a back-up wrench on the inlet boss of the gas valve, finish tightening the gas pipe to the gas valve.
10. Turn gas on at electric switch on gas valve.

CHECK INLET GAS PRESSURE



CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit damage.

DO NOT operate furnace more than one minute to check inlet gas pressure, as conversion is not complete at this time.

NOTE: This kit is to be used only when inlet gas pressure is between 4.5-in. w.c. and 13.6-in. w.c.

1. On some models, remove 1/8-in. (3 mm) pipe plug from inlet pressure tap (see Fig. 18 and Fig. 19) and insert pressure tap. Or, on some models, loosen set screw on inlet tower pressure tap no more than one full turn with the 3/32-in. hex wrench, see Fig. 11 or Fig. 12.
2. Verify manometer is connected to inlet pressure tap on gas valve, see Fig. 11 or Fig. 12.
3. Turn on furnace power supply.
4. Turn gas supply manual shutoff valve to ON position.
5. Turn furnace gas valve switch to ON position.



WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.



WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

Single Stage Gas Valve

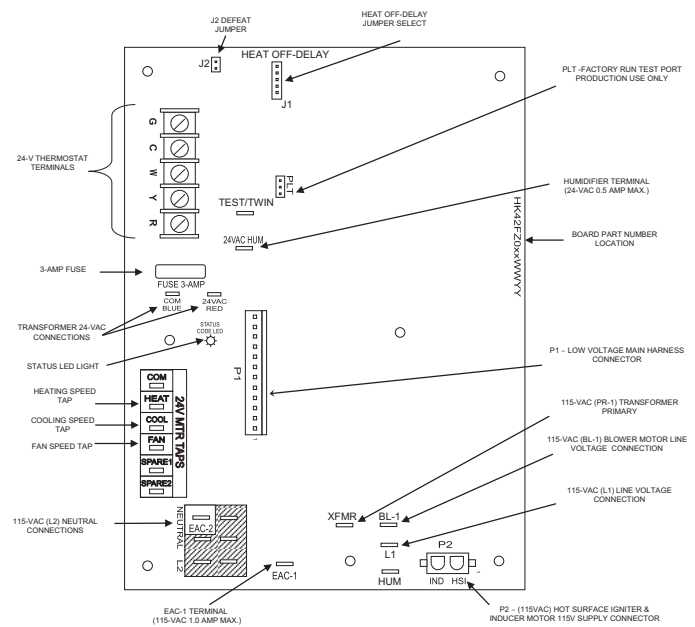


Fig. 20 – Example of Single Stage Furnace Control

A190022

1. Jumper R-W thermostat connections on control.
2. When main burners ignite, confirm inlet gas pressure is between 4.5-in. w.c. and 13.6-in. w.c.
3. Remove jumper across R-W thermostat connections to terminate call for heat.
4. Turn furnace gas valve switch to OFF position.
5. Turn gas supply manual shutoff valve to OFF position.
6. Turn off furnace power supply.
7. Remove manometer and on some models remove pressure tap fitting.
8. On some models, apply pipe dope sparingly to end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap with a 3/32-in. hex wrench, see Fig. 11 or Fig. 12.

Variable Speed Blower, Two-Stage Gas Valve

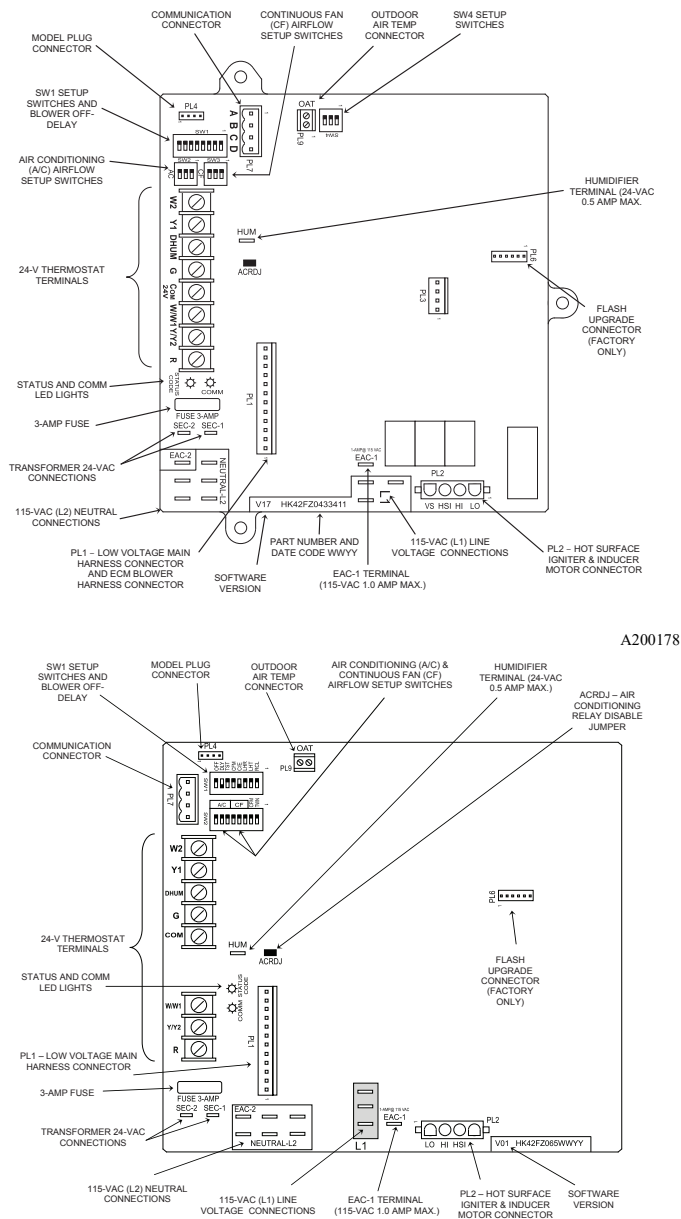


Fig. 21 – Example of Variable Speed Furnace Control for ECM (VCA) Blower Motor

1. Turn Setup Switch SW1-2 on furnace control ON, see Fig. 21.
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 4.5-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap with a 3/32-in. hex wrench, see Fig. 13 or Fig. 14.

Fixed Speed Blower (FCT), Two-Stage Gas Valve

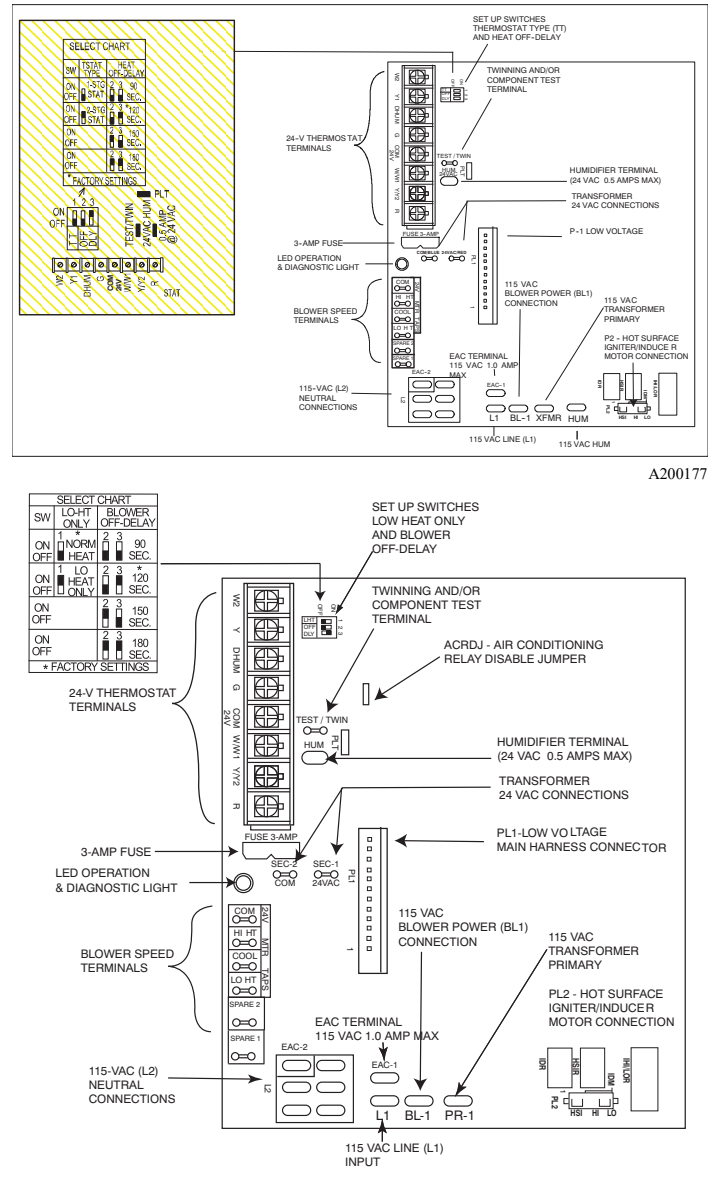


Fig. 22 – Example of Two-Stage Furnace Control

1. Turn Setup Switch SW1 (LHT or TT) on furnace control ON, see Fig. 22.
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 4.5-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap no more than one full turn with a 3/32-in. hex wrench, see Fig. 13 or Fig. 14.

Modulating Gas Valve

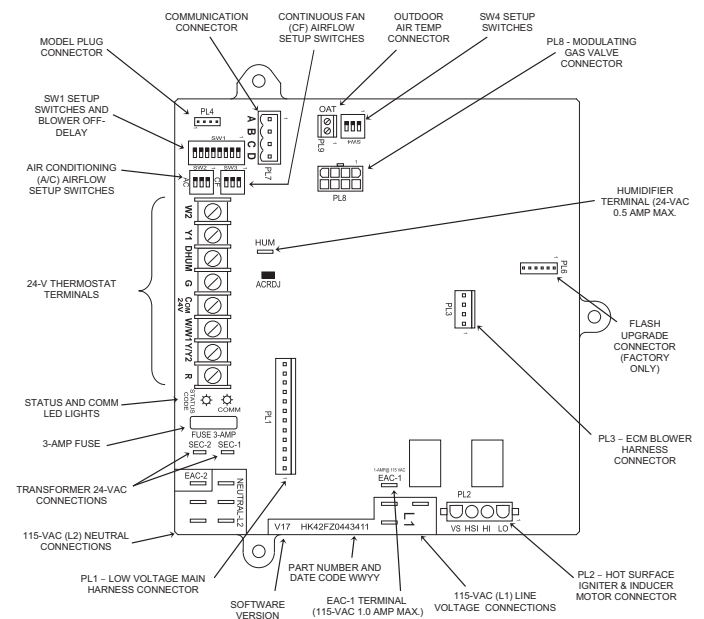


Fig. 23 – Example of Modulating Furnace Control for ECM Blower Motor

1. Turn Setup Switch SW1-2 on furnace control ON, see Fig. 23.
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 4.5-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap with a 3/32-in. hex wrench, see Fig. 17.

CHECK FURNACE AND MAKE ADJUSTMENTS

! WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

! AVERTISSEMENT

RISQUE D'EXPLOSION ET D'INCENDIE

Le non-respect des avertissements de sécurité pourrait d'entraîner des blessures graves, la mort ou des dommages matériels.

Ne jamais utiliser une flamme nue pour vérifier la présence des fuites de gaz. Pour la vérification de tous les joints, utiliser plutôt une solution savonneuse commerciale fabriquée spécifiquement pour la détection des fuites de gaz. Un incendie ou une explosion peut entraîner des dommages matériels, des blessures ou la mort.

1. Be sure main gas and electric supplies to furnace are off.
2. On some models, remove 1/8-in. (3 mm) pipe plug from manifold pressure tap on the outlet end of gas valve and insert pressure tap. Or, on some models, loosen the set screw on manifold tower pressure tap no more than one full turn with the 3/32-in. hex wrench.
3. Attach manometer to manifold pressure tap on gas valve, see Fig. 11, Fig. 12, Fig. 13, Fig. 14, or Fig. 17.
4. Turn gas supply manual shutoff valve to ON position.
5. Turn furnace gas valve switch to ON position.
6. Check all threaded pipe connections for gas leaks.
7. Turn on furnace power supply.

GAS INPUT RATE INFORMATION

See furnace rating plates, see Fig. 5, Fig. 6, or Fig. 7, for input rate. The input rate for natural gas is determined by manifold pressure and orifice size.

Modulating gas valve must be set for Maximum Heat first and then set for Minimum heat on Modulating furnaces.

Two-Stage gas valve must be set for High Heat first and then set for Low Heat on Two-Stage furnaces.

Furnace gas input rate on rating plate is for installations at altitudes up to 2000 ft. (610 M).

In the U.S.A.; the input rating for altitudes above 2000 ft. (610M) must be reduced by 2 percent for each 1000 ft. (305 M) above sea level.

In Canada; the input rating must be derated by 5 percent for altitudes of 2000 ft. (610 M) to 4500 ft. (1372 M) above sea level.

The Conversion Kit Rating Plate accounts for high altitude derate.

SET GAS INPUT RATE

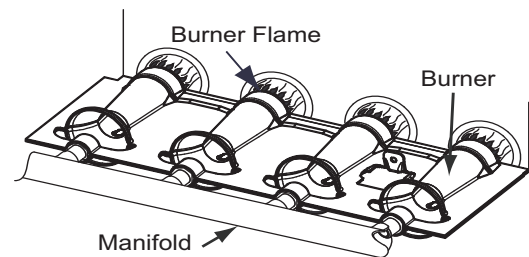


Fig. 24 – Burner Flame

Single Stage Gas Valve

1. Jumper R and W thermostat connections to call for heat, see Fig. 20.
2. Check manifold orifices for gas leaks when main burners ignite.
3. Adjust gas manifold pressure, see Table 4.
4. Remove cap that conceals gas valve regulator adjustment screw.
5. Turn adjusting screw counterclockwise (out) to decrease manifold pressure or clockwise (in) to increase manifold pressure.
6. Replace gas valve regulator seal cap.

7. Verify manifold pressure is correct.

NOTE: Gas valve regulator seal cap **MUST** be in place when checking input rate. When correct input is obtained, main burner flame should be clear blue, almost transparent, see [Fig. 24](#). Be sure regulator seal cap is in place when finished.

8. Remove jumper across R and W thermostat connections to terminate call for heat.
9. Turn furnace gas valve control switch or control knob to OFF position.
10. Turn off furnace power supply.
11. Remove manometer and on some models remove pressure tap fitting.
12. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench, see [Fig. 5](#).
13. Turn furnace gas-valve switch to ON position.
14. Turn on furnace power supply.
15. Set room thermostat to call for heat.
16. Check pressure tap plug for gas leaks when main burners ignite.
17. Check for correct burner flame.
18. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

Fixed-Speed Blower (FCT). Two-Stage Gas Valve

1. Verify SW1 (LHT or TT) on furnace control is turned "ON". See [Fig. 22](#).
2. Jumper R and W/W1 thermostat connections to call for heat.
3. Check manifold orifices for gas leaks when main burners ignite.
4. Adjust gas manifold pressure, see [Table 5](#).
5. Remove caps that conceal adjustment screws for gas valve regulators, see [Fig. 6](#).
6. Adjust low heat input rate manifold pressure for propane gas.
7. Turn low heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
8. When correct input is obtained, main burner flame should be clear blue, almost transparent, see [Fig. 24](#).
9. Jumper R and W/W1 and W2 on control center thermostat connections. This keeps furnace locked in high heat operation.
10. Adjust high heat input rate manifold pressure for propane gas.
11. Turn high heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
12. Replace caps that conceal gas valve regulator adjustment screws.
13. When correct input is obtained, main burner flame should be clear blue, almost transparent, see [Fig. 24](#).
14. Remove jumper across R, W1, and W2 after high heat adjustment to terminate call for heat.
15. Turn setup switch SW1 (TT) on furnace control to OFF position.
16. Turn furnace gas-valve switch to OFF position.
17. Turn off furnace power supply.
18. Remove manometer from the manifold pressure tap of the gas valve.
19. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench, see [Fig. 6](#).
20. Turn on furnace power supply.
21. Set room thermostat to call for heat.
22. Check pressure tap plug for gas leaks when main burners ignite.

23. Check for correct burner flame.

24. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

Variable Speed. Two-Stage Gas Valve

1. Verify SW1-2 on furnace control is turned "ON".
2. Jumper R and W/W1 thermostat connections to call for heat.
3. Check manifold orifices for gas leaks when main burners ignite.
4. Remove caps that conceal adjustment screws for gas valve regulators, see [Fig. 6](#).
5. Adjust low-heat manifold pressure for propane gas, see [Fig. 6](#).
6. Turn low-heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.

NOTE: When correct input is obtained, main burner flame should be clear blue, almost transparent, see [Fig. 24](#).

7. Jumper R, W/W1 and W2 on control center thermostat connections. This keeps furnace locked in high-heat operation.
8. Adjust high-heat manifold pressure for propane gas.
9. Turn high-heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
10. Replace caps that conceal gas valve regulator adjustment screws.

NOTE: When correct input is obtained, main burner flame should be clear blue, almost transparent, see [Fig. 24](#).

11. Remove jumper across R, W1, and W2 after high-heat adjustment to terminate call for heat.
12. Turn setup switch SW1-2 on furnace control to OFF position.
13. Turn furnace gas valve switch to OFF position.
14. Turn off furnace power supply.
15. Remove manometer from the manifold pressure tap of the gas valve.
16. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench, see [Fig. 6](#).
17. Turn furnace gas valve switch to ON position.
18. Turn on furnace power supply.
19. Set room thermostat to call for heat.
20. Check pressure tap plug for gas leaks when main burners ignite.
21. Check for correct burner flame.
22. Observe unit operation through two complete heating cycles.
23. See Sequence of Operation in furnace Installation, Start-up, and Operating Instructions.
24. Set room thermostat to desired temperature.
25. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

Modulating Gas Valve



CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in gas valve damage. Do not force the rotary adjustment switch on the modulating gas valve. Do not turn the rotary adjustment switch faster than one click per second when adjusting manifold pressure. Gas valve will be damaged if excessive force is used on the rotary switch.

For proper operation and long term reliability, the manifold pressure must be adjusted as specified on the conversion kit rating plate.

The modulating furnace manifold pressure is set at two points. The first point is Maximum Heat. The second point is Minimum Heat. Do not adjust Intermediate Heat manifold pressure. Intermediate Heat manifold pressure can be checked as part of the temperature rise, but is not adjustable. Always adjust Maximum Heat first, then Minimum Heat.

NOTE: Use care when performing adjustments. Gas valve adjustment is performed by turning a rotary adjustment switch inside the gas valve with a small straight blade screwdriver. Excessive force can break or bend the rotary adjustment switch making it non-adjustable.

To adjust manifold pressure to obtain input rate for Maximum Heat:

1. Turn Setup switch SW1-2 to ON.
2. Verify Set-up switch SW4-2 is turned OFF.
3. Jumper the R to W/W1 and W2 thermostat connections at the furnace control board.
4. After the main burners ignite and the blower starts, confirm Maximum Heat manifold pressure is correct, based on the manifold pressure table on the Conversion Kit Rating Plate.
5. To adjust the Maximum Heat manifold pressure, Slowly turn the rotary adjustment switch counterclockwise to decrease manifold pressure or clockwise to increase manifold pressure.
6. Turn rotary adjustment switch no more than one click per second until you obtain the required manifold pressure.

Main burner flame should be clear blue, almost transparent.

To adjust manifold pressure to obtain input rate for Minimum Heat:

1. Remove the jumper from W2 at the thermostat connections at the furnace control board control.
2. Wait until the burners and the blower transitions to Minimum Heat.
3. Verify the Minimum Heat manifold pressure is correct, based on the manifold pressure table on Conversion Kit Rating Plate.
4. To adjust the Minimum Heat manifold pressure, Slowly turn the rotary adjustment switch counterclockwise to decrease manifold pressure or clockwise to increase manifold pressure.
5. Turn rotary adjustment switch no more than one click per second until you obtain the required manifold pressure. This adjustment will not affect the previous Maximum Heat adjustment.

After adjusting the manifold pressure, allow the furnace to operate an additional 5 minutes before checking Minimum Heat Temperature rise.

Furnace must operate within ranges of temperature rise specified on the furnace rating plate. Determine air temperature rise as follows:

1. Place thermometers in return and supply ducts as near furnace as possible. Be sure thermometers do not see heat exchanger so that radiant heat does not affect readings. This practice is particularly important with straight-run ducts.
2. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.
3. Allow the furnace to run for at least 10 minutes before checking Temperature Rise.

If the temperature rise is too high or too low in Minimum Heat:

1. Remove jumpers from R and W/W1.
2. Wait until the blower off delay is completed.
3. Turn 115 VAC power off.
4. Check the position of Heat Rise Adjustment Switch SW1-3. When set to ON, airflow is raised 18% higher for Minimum Heat and Intermediate Heat. Factory default position is OFF.
5. Turn 115 VAC power on.
6. Jumper R to W/W1 and W2.
7. After burners ignite and blower starts allow the furnace to run for at least 10 minutes before checking Temperature Rise.

Maximum Heat Temperature Rise

If the temperature rise is too high or too low in Maximum Heat:

1. Remove jumpers from R, W1 and W2.
2. Wait until the blower off delay is completed.
3. Turn 115 VAC power off.
4. Check the position of the Efficiency/Comfort Adjustment switch SW1-4. When set to OFF (Efficiency Mode), airflow is 10% higher for Minimum, 7.5% for Intermediate Heat, and 17.5% for Maximum Heat. Factory default position is ON (Comfort Mode).
5. Turn 115 VAC power on.
6. Re-check Minimum Heat Temperature Rise.
7. Remove jumpers across thermostat connections to terminate the call for heat. Wait until the blower off delay is completed.
8. Turn gas supply manual shutoff valve to OFF position.
9. Turn off furnace power supply. Turn setup switch SW1-2 to OFF.
10. Remove manometer from the manifold pressure tap of the gas valve.
11. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening, see Fig. 7. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench, see Fig. 25)
12. Re-install plastic cap over rotary adjustment switch on the top of the gas valve.

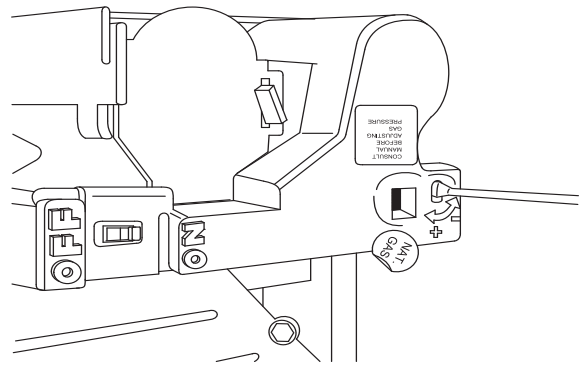


Fig. 25 – Modulating Gas Valve Adjustment

A11451



WARNING

FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Manifold pressure tap set screw must be tightened or 1/8-in. (3 mm) NPT pipe plug must be installed to prevent gas leaks.

13. Turn furnace gas valve switch to ON position.
14. Turn on furnace power supply.
15. Set room thermostat to call for heat.
16. Check pressure tap plug for gas leaks when main burners ignite.
17. Check for correct burner flame.

LABEL APPLICATION

- 1. Fill in Conversion Responsibility Label 346162-205 and apply to Blower Access Door of furnace. Date, name, and address of organization making this conversion are required, see Fig. 26.
- 2. Attach Conversion Rating Plate Label 346162-201, -204, -206, -207, -208 or -209 to outer door of furnace, see Fig. 5, Fig. 6 or Fig. 7.
- 3. Attach Gas Control Conversion Label 346162-202 to gas valve. Do not use 346162-203, which is similar.

CHECKOUT

- 1. Observe unit operation through two complete heating cycles.
- 2. See Sequence of Operation in furnace Installation, Start-Up, and Operating Instructions.
- 3. Set room thermostat to desired temperature.


<p>THIS FURNACE WAS CONVERTED ON _____ TO NATURAL GAS (DAY-MONTH-YEAR) KIT NO.: AGAGC9PNS01B</p> <p>BY:</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>(Name and address of organization making this conversion), which accepts the responsibility that this conversion has been properly made.</p>	<p>CETTE FOURNAISE A ÉTÉ CONVERTED AU GAZ NATUREL LE _____ (JOUR-MOIS-ANNÉE) DE L'ENSEMBLE N°. AGAGC9PNS01B</p> <p>PAR:</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>(Nom et adresse de l'organisme qui a effectué la conversion), qui accepte l'entière responsabilité de la conversion.</p> <p>346162-205 REV.B</p> 
--	--

Fig. 26 – Gas Conversion Responsibility Label

A200244

<p>This control has been converted for use with natural gas. Cette commande a été réglée pour emploi avec le gaz naturel.</p> <p>346162-202 REV.B</p> 	<p>This control has been adjusted for use with natural gas. Ce coontrôle a été réglée pour fonctionner au gaz naturel.</p> <p>346162-203 REV.A</p>
--	--

Fig. 27 – Gas Control Conversion Label

A200245