



HOME AUTOMATION
The heart of a smarter home.

Quick Start Guide for
steps on how to create
an automation or scene.




You can automate your system to do many things. This guide will walk you through turning on a Z-Wave® device when a Window / Door sensor is opened.

CABINET DOOR OPENING TRIGGERS ADD-ON SIREN TO ALARM

STEP 1

After logging into the site, select *Settings* from the hamburger menu on the top left. Select *Automation (Scenes)* from the drop down menu in the *Settings Selector* menu.

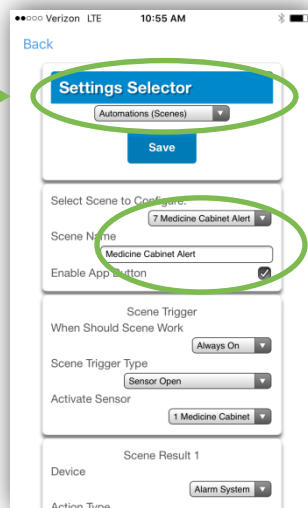


STEP 2

Select the next available scene, "X Scene" and name your automaton. Be sure to select a name that is intuitive.

STEP 3

Select *Always On* and decide what triggers the action (i.e. the cabinet door opens = sensor open). Next, select which sensor (in this case, medicine cabinet door).

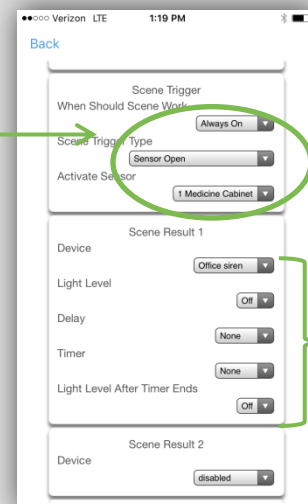

STEP 4

In Scene Result 1, select the Z-Wave Device you want to turn on (In this case, office siren). Chose "On" for *Light Level*, this triggers the Z-wave device to turn on. Next, choose if you want a delay, and how long you want your siren to stay on, select "Off" in the *Light Level After Timer Ends* drop down menu to turn off the Z-wave device after your desired time. Click Save and your automation is now created.