

HA-6400 Côr™ Home Automation Change Côr Panel Spoken Voice Language -French or Spanish



Technical Supplement

SUBJECT

The Côr Home Automation system has an option to allow installers to change the spoken language of the Côr panel to another language i.e. French or Spanish/Española.

To modify the voice language of the panel, installers would need the following:

- Côr panel connected to an internet network either over Wi-Fi or Ethernet
- DLX900 Software Program (Windows based only)
- Desired language file saved on the computer to upload to the Côr panel
 - French file 0D0B001001_19_fr-CA.mif3
 - Spanish/ Española file 0D0B001001_21_es-MS.mif3


Visit <http://www.interlogix.com/library> to search and download the latest version of the DLX900 software.

NOTE: An overview of the DLX900 Software Program including the language files are available on the Côr Home Automation Product Dashboard in HVACpartners by going to **Products & Solutions > Product Dashboards > Côr Home Automation > Installation & Training > Installation.**

Step 1 — Connect to the Côr panel using DLX900

Create a New Customer account and establish a connection to the Côr panel (refer to DLX900 Overview presentation for further information).

Once connected, click on **Devices > Device info** and click on the **Update Control** button.

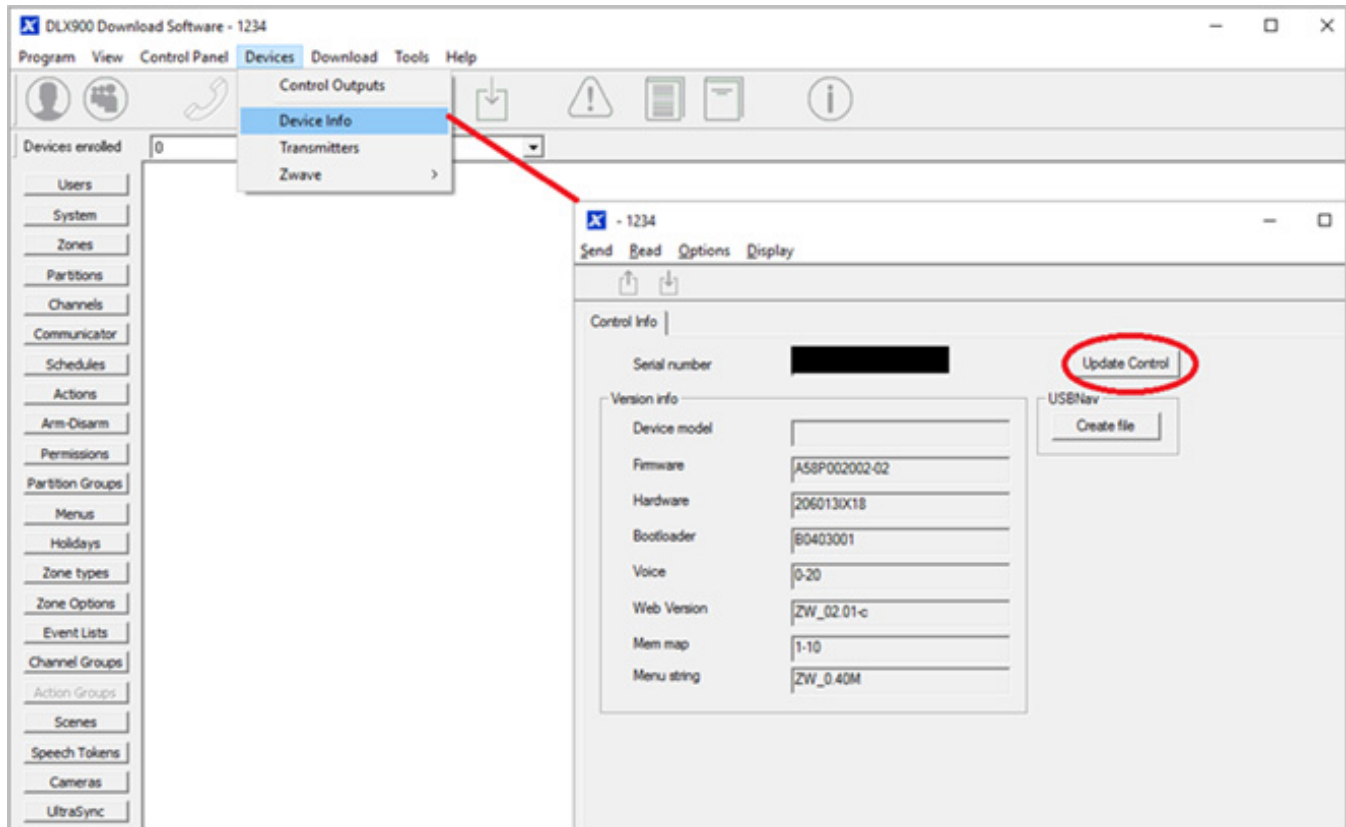


Step 2 — Download the desired Language File to the Côr Panel

When the popup menu appears on the screen, browse to locate the desired language file saved on the computer and click **Open**.

Each Côr panel can store up to 3 language files. After selecting the language file designation, select which slot (2-3) that the language file will be added. Slot 1 is English and the additional language file should be added to slot 2 or 3 (otherwise the English file will be overwritten and will not be available).

The DLX900 software will download the file to the panel and alert you when done. The process takes around 10-20 minutes to complete.

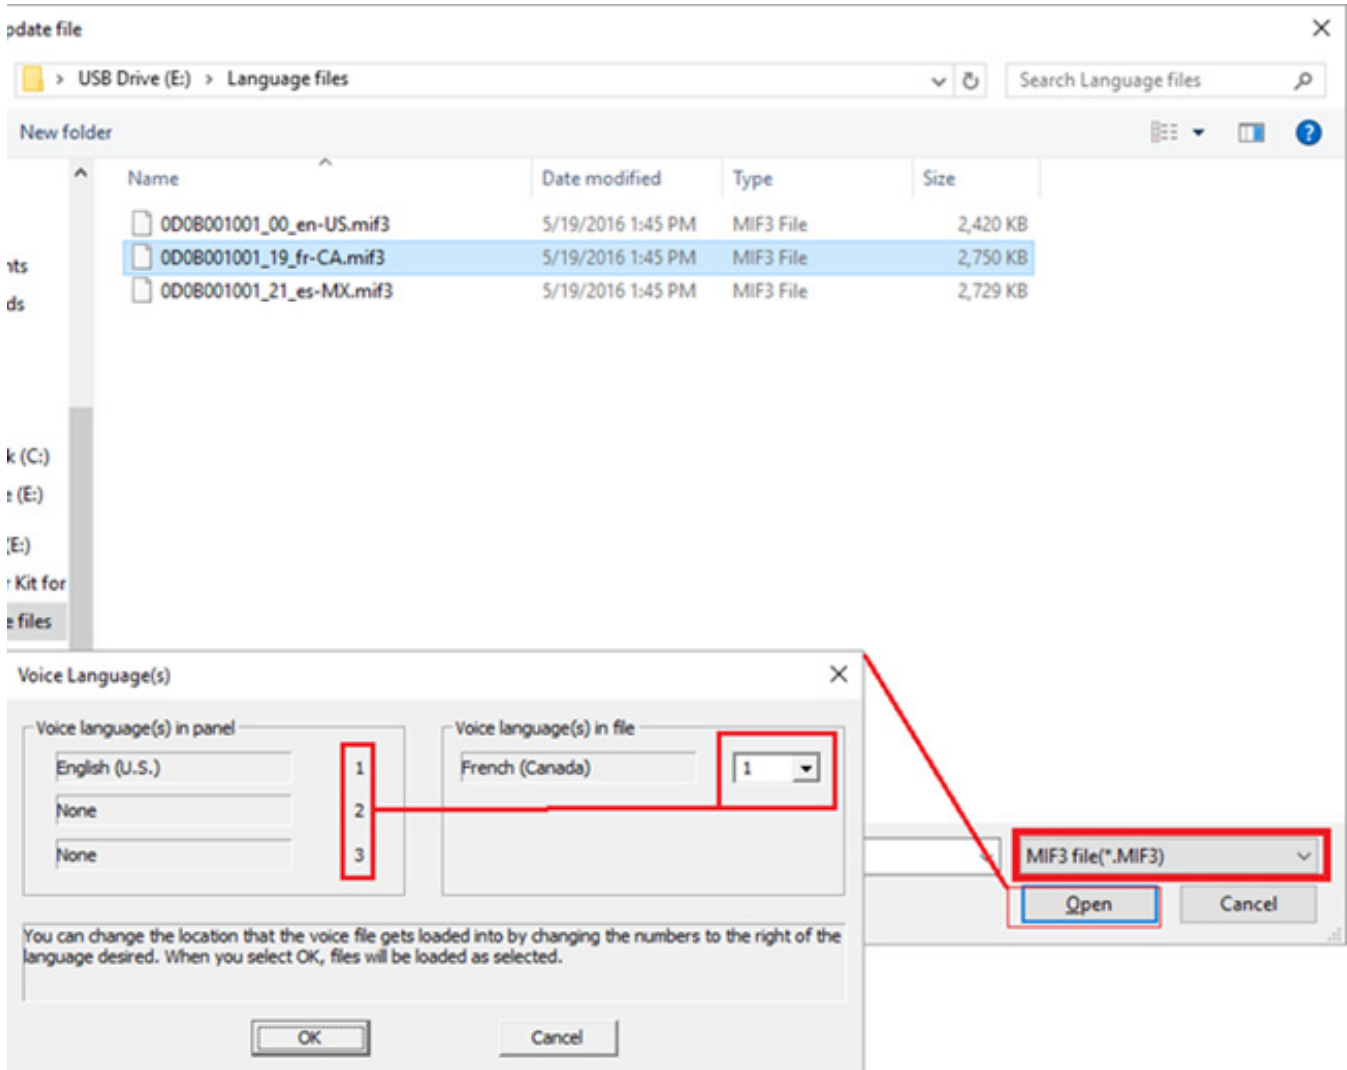

Step 3 — Changing the Voice Language Setting

Once the language file is downloaded to the Côr panel, login the Côr system as an installer using the Côr Home Automation app or UltraSync Web Portal. After logging in the system, go to **Settings > System > Voice Language** and select the desired language from the dropdown menu. Click **Save** when finished.

Settings Selector

System ▾

Save

Control Name

Alarm System

Language

English ▾

Voice Language

English ▾

English

Español/Spanish

Français/French

System Date

2016-05-24

Date:

Time (hh:mm:ss) :

15 21 4

System Time Zone

Hours Offset



